
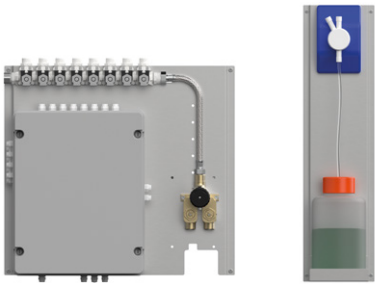



GLASIS 75

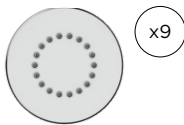

Description	Technical info N.9 Wall mounted built-in round side jets 75 mm. Wall recess depth: 53,5/71 mm Water Supply: 1/2" inch Operating pressure: 1,5-5 / 3 bar	Control unit Electrical supply: 230 V Power supply: 100 W Water supply: 3/4 inch male Dimension: 550 x 395 x 149,5 mm Pre-wired control panel with stainless steel support to be installed in a special technical compartment. User interface with display for setting parameters and 12V power supply. Manual thermostatic to manage temperature.
Functions	Optional Support frame with integrated aroma pumps with mint and citrus tanks. Dimension 1 set aroma: 850 x 200 x 210 mm.	Programs Activation: 1 push button keyboard in super mirror stainless steel. Dimesion keyboard: 120 x 90 x 3 mm Functions: 1 Program: P-SPORT Sport program

Jets	Rain x9

Finishes		Chrome	OA-310C		Gold	OA-310AU		Copper bronze brushed	OA-310CBRX
		Brushed chrome	OA-310X		Copper bronze	OA-310CBR		Gun metal brushed	OA-310GMX
		White	OA-310W		Gun metal	OA-310GM			
		Matt black	OA-310BK		Gold brushed	OA-310AUX			


EXAMPLE OF INSTALLATION

Hydraulic scheme legend

- Inlet water supply 3/4"
- Water pipes 1/2"
- Aroma

Technical information


Inlet water supply	3/4"
Water pipes 1/2"	1/2"
Operating pressure	1,5/5 bar
Recommended pressure	3 bar

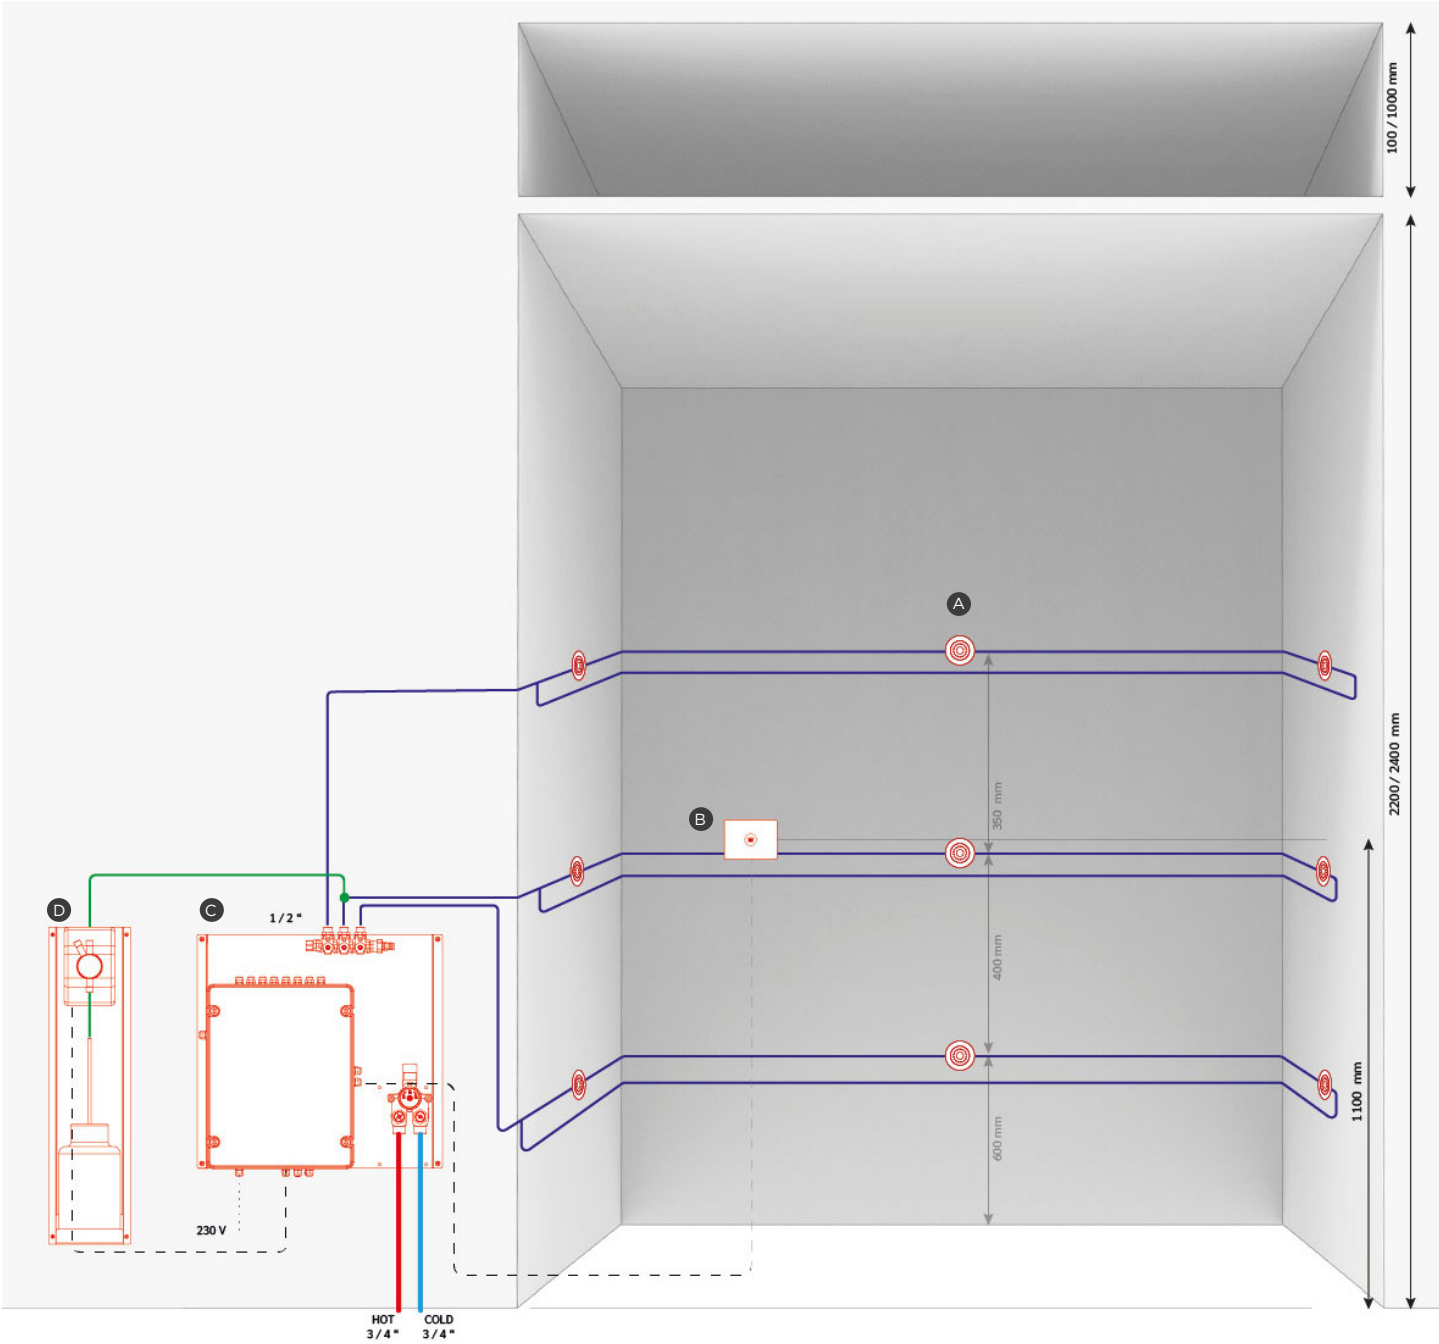

Variants

	A Shower	B Control panel	C Control unit	D Aroma 1
OA-310C	9			
OA-311C	9			

Electrical scheme legend

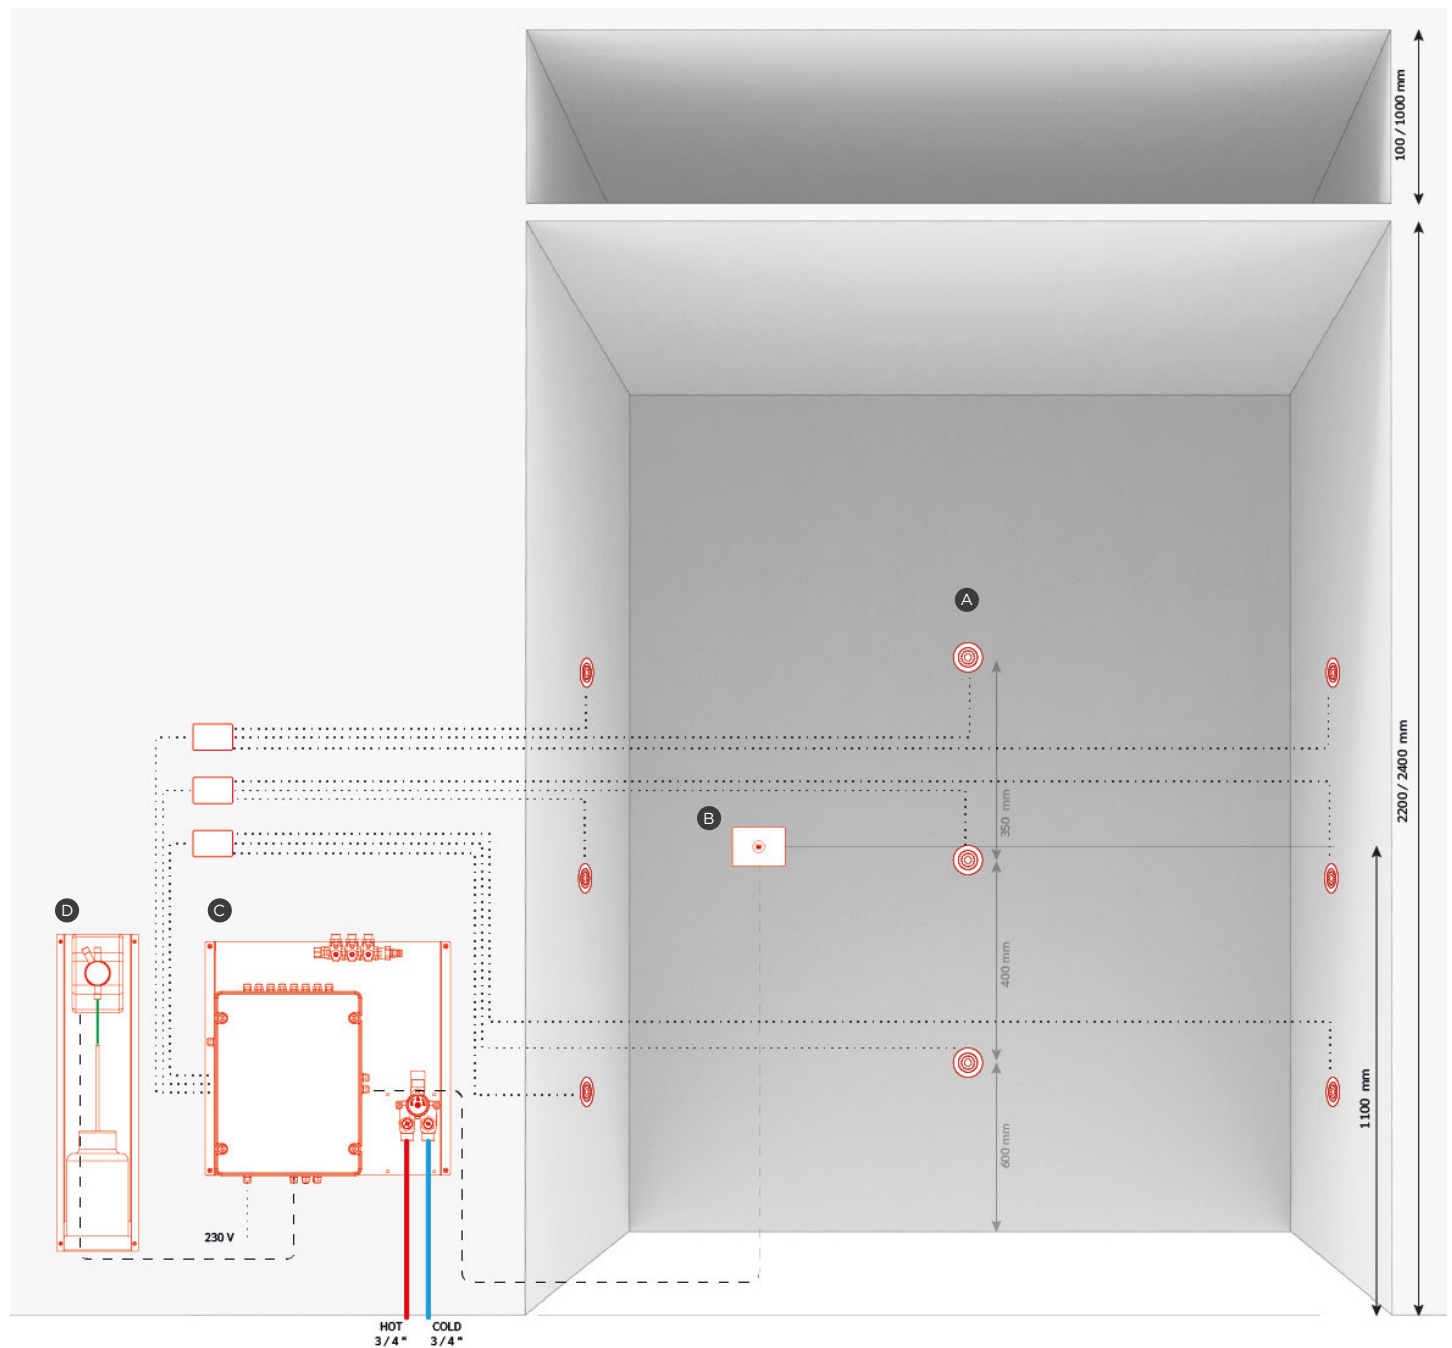

	(A) Shower	(B) Control panel	(C) Control unit	(D) Aroma 1
OA-310C	9			
OA-311C	9			

DOWNLOAD AREA

To download the files,
select one of these links.

Showerhead

[Datasheets](#)
[Manuals](#)
[CAD files](#)


COD. BL85C1



Control panel

[Datasheets](#)
[Manuals](#)
[CAD files](#)


COD. P45



Control unit

[Datasheets](#)
[Manuals](#)
[CAD files](#)

COD. ECU200TH

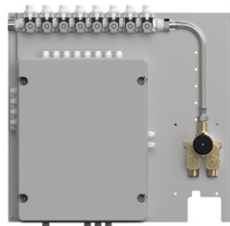

Aroma


[Datasheets](#)
[Manuals](#)
[CAD files](#)

COD. P018



PROGRAM

SPORT

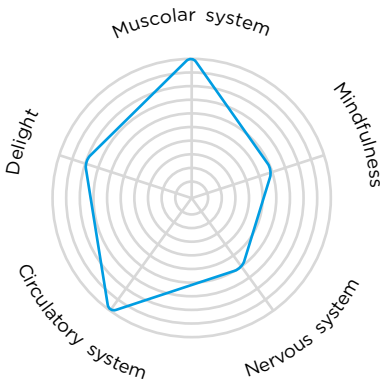

The Glasis Sport program delivers an effective cooling experience by alternating various jets to optimize their impact on both temperature reduction and massage. The program first activates the initial line of jets, followed by the second, and finally the third. After this sequence, all jets are activated simultaneously before returning to the alternating phase. This alternating operation is designed to maximize the effectiveness of each line of jets, thereby enhancing the massaging and toning effects.

Example of GLASIS 75

Time	5s	3s	3s	3s	3s	3s	4s	5s	5s	5s	4s	3s	3s	3s	3s	3s	5s	3s	4s	4s	5s	4s	4s	3s	5s
Temperature	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°	15°
Shoulder rain	■			■				■	■	■				■			■			■	■	■			■
Body rain			■		■		■	■	■	■	■		■		■		■		■	■	■	■	■		■
Leg rain	■	■				■	■		■		■	■				■	■	■	■		■		■	■	■
Aroma	Mint								Mint								Mint				Mint				
Color	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■